

FITTING INSTRUCTIONS

making everyday smoother



VOLKSWAGEN / FORD CADDY MK5 / TOURNEO CONNECT

VB-FullAir 2C
rear axle

FOR KIT: 1050924200

(ADDITIONAL TO 730105092400)










REVISION TABLE





Document number	730105092401			
New revision:	V1.1		Old revision:	V1.0
Release date (yyyy-mm-dd):	2022-01-01			
Page (new):	Changes:			
7	Updated step 3			








FITTING INSTRUCTIONS
730105092400

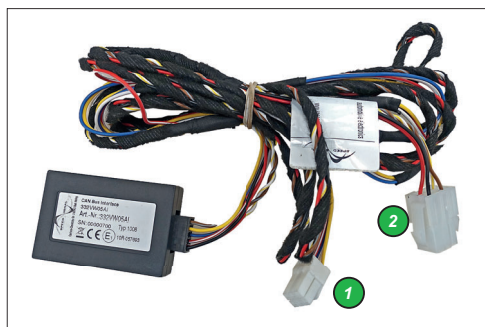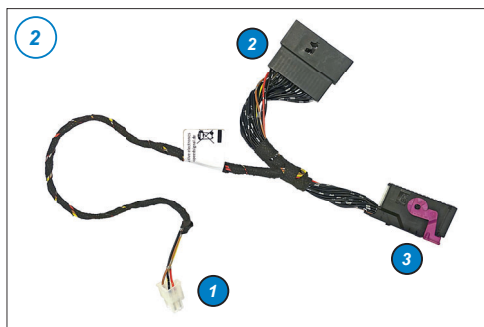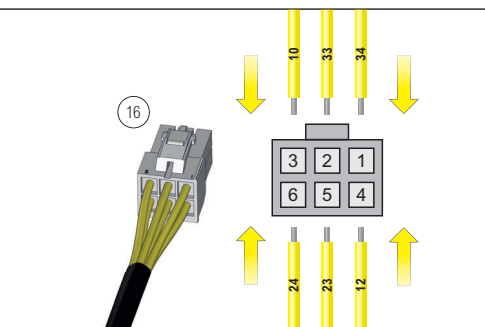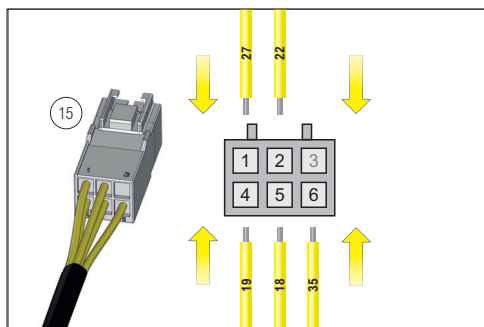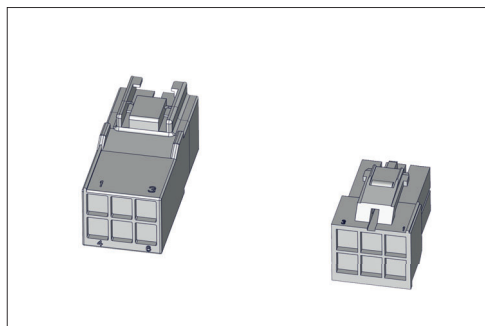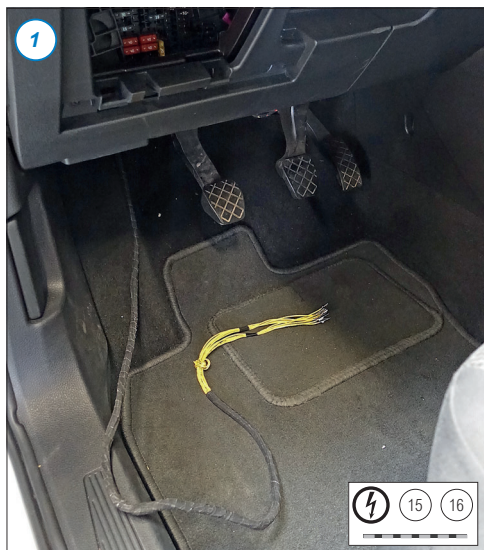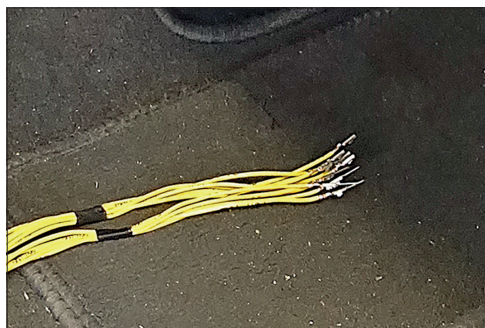






A B C

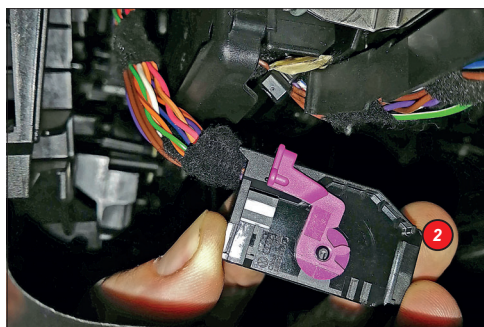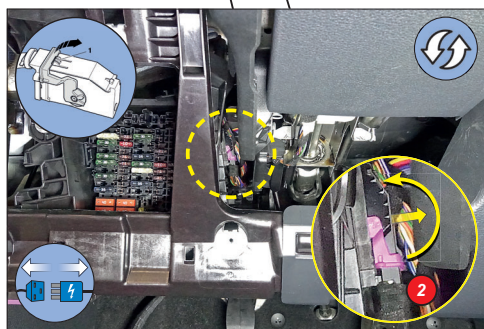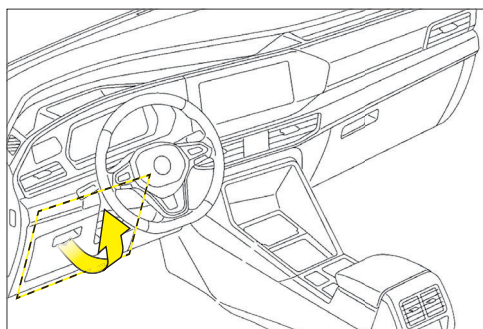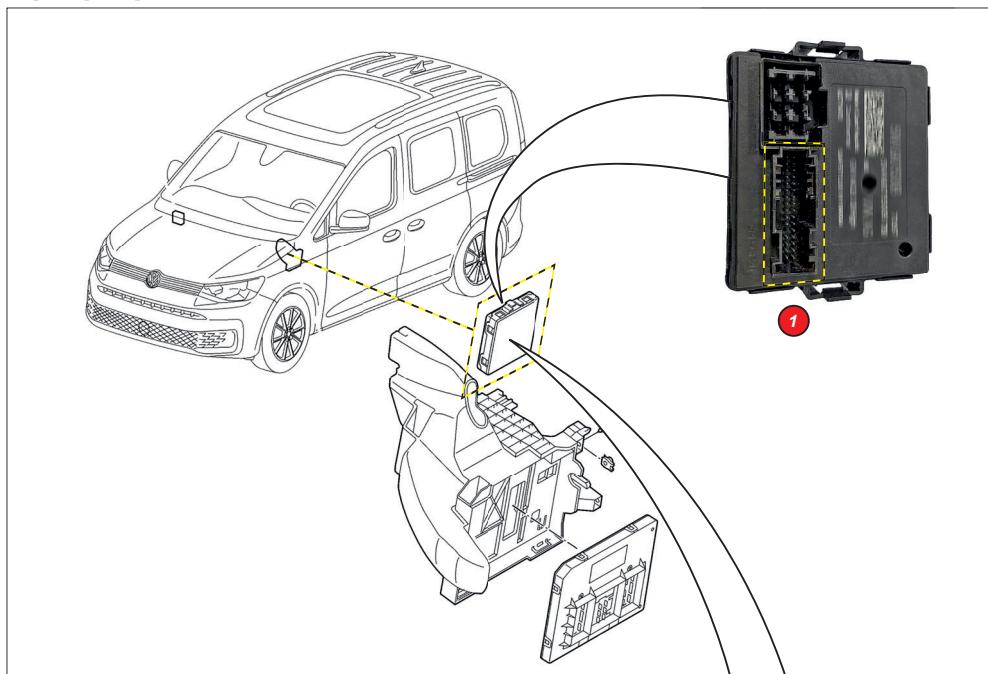

A B C

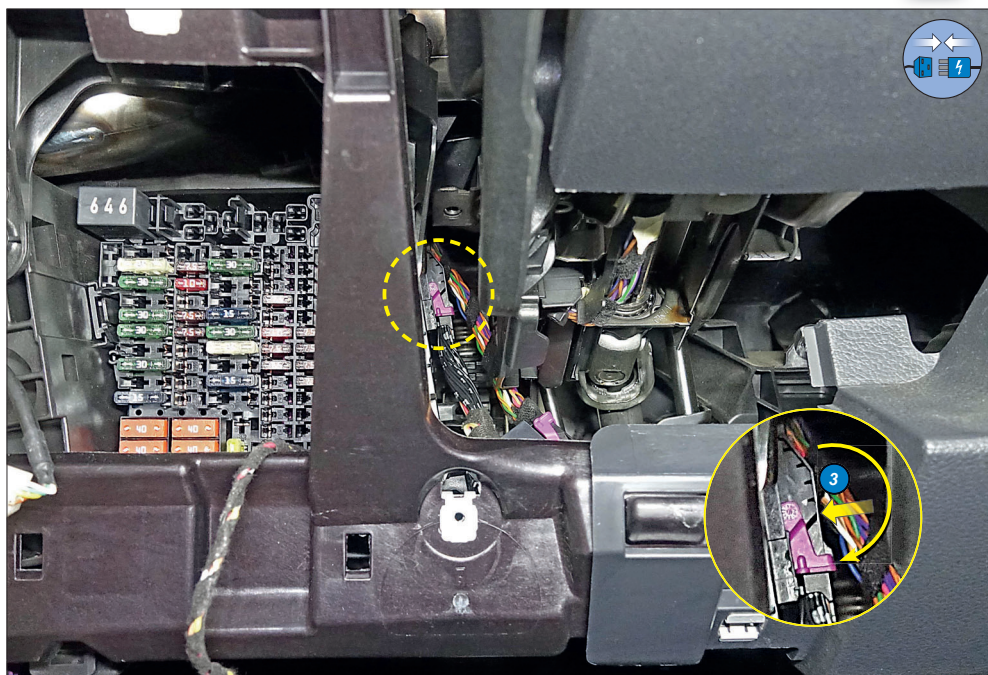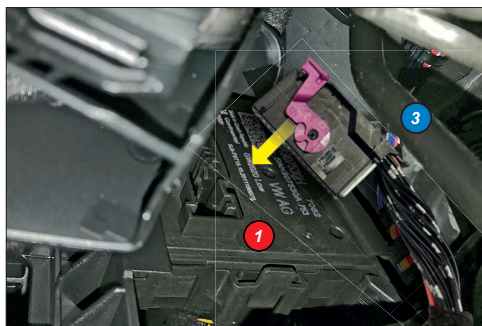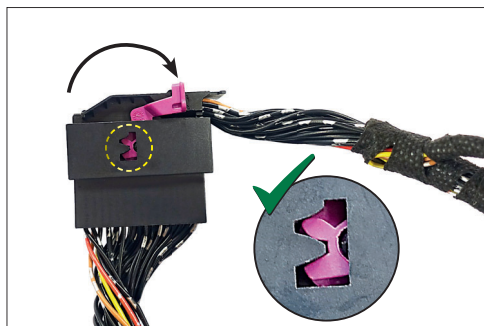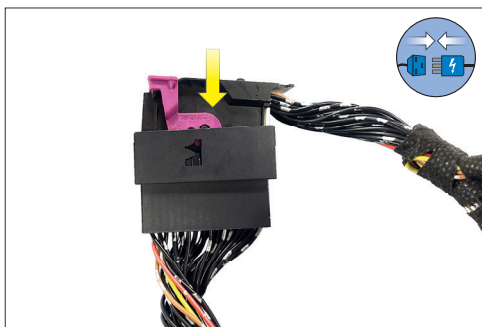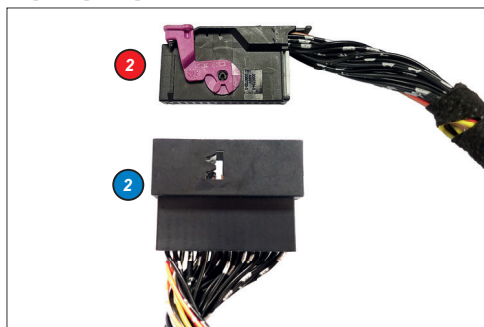

A B C

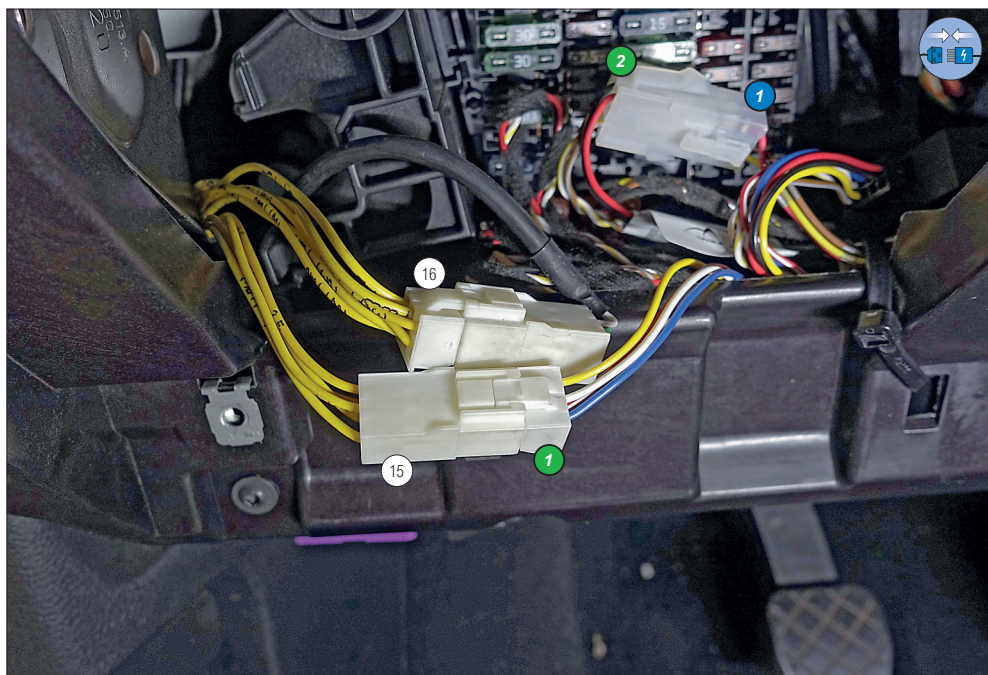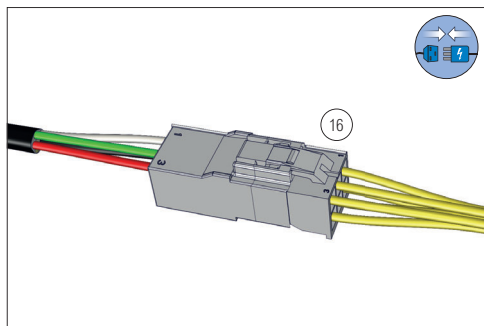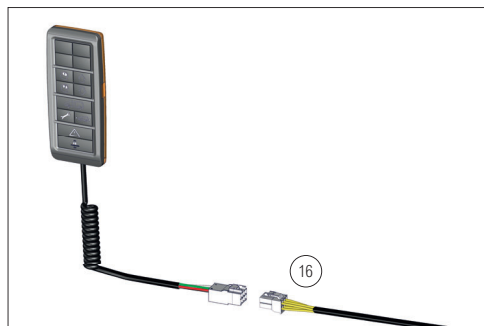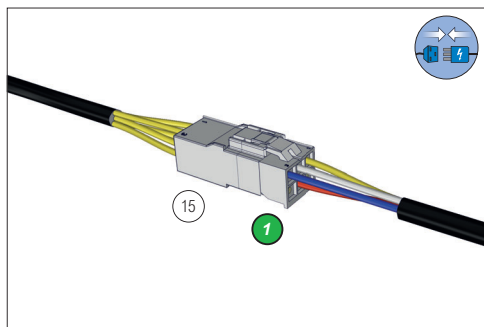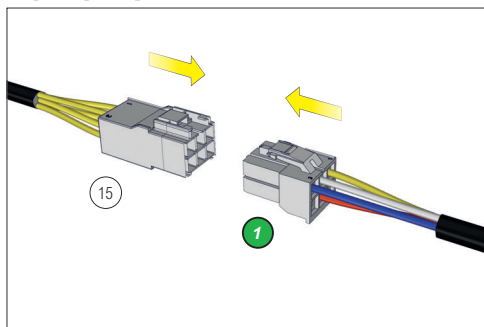


A B C



FITTING INSTRUCTIONS
730105092400



44

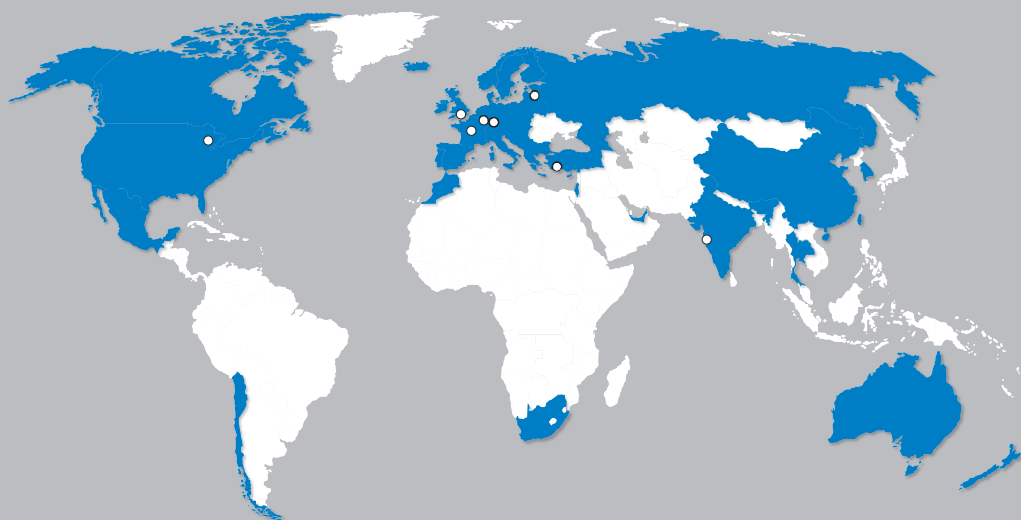

VB-AIRSUSPENSION,

INCREASED COMFORT, BETTER DRIVEABILITY, MORE SAFETY.



730105092401 ALL V1.1