

FORD

Transit V363 RWD/FWD - 2014-current - AdBlue (Euro 6)




Transit V363 RWD/FWD - 2014-current - AdBlue (Euro 6)

735105061902

V 05

For kit numbers:		For kit numbers:	
1050619201	RWD	1050618200	FWD 330-350
		1050618202	FWD 290-310

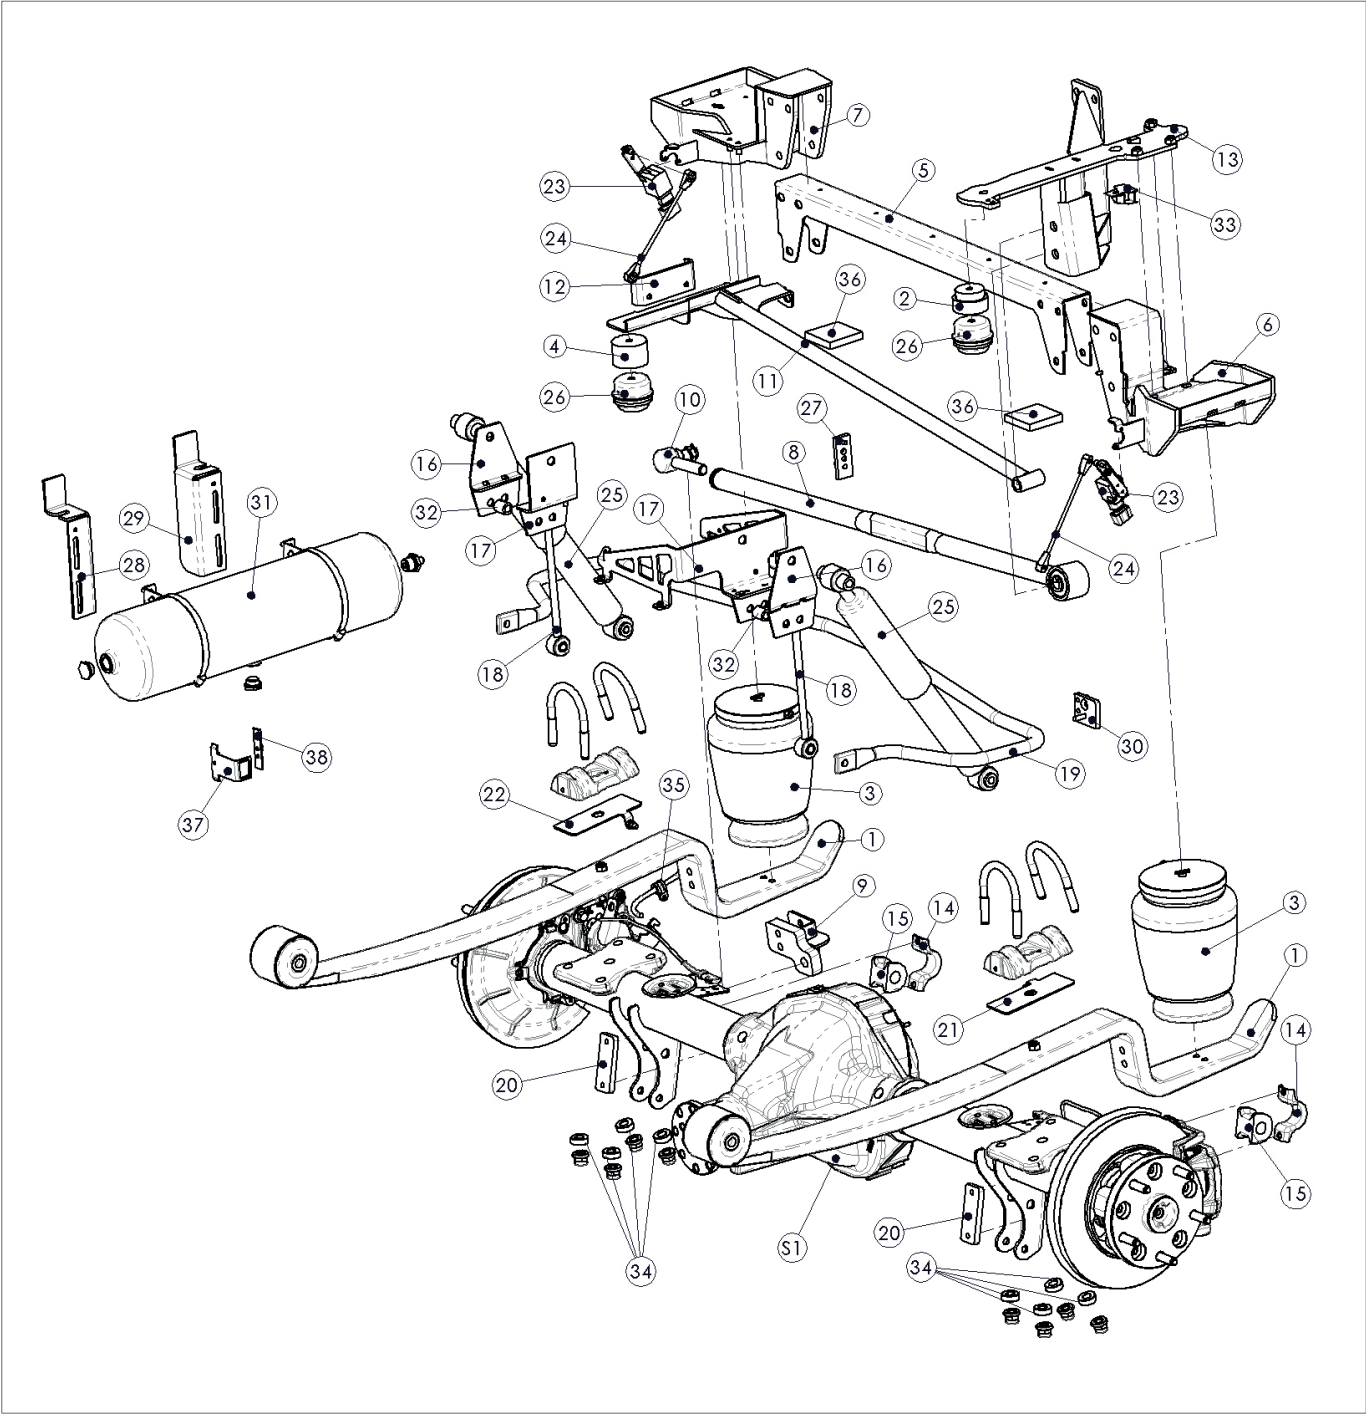

Original parts from the vehicle

Item	Qty.	Description
S1	1	rear axle


FORD

Transit V363 RWD/FWD - 2014-current - AdBlue (Euro 6)



Item	Qty.	Description	Part number RWD (kit nr. 1050619201)	Part number FWD 290-310 (kit nr. 1050618202)	Part number FWD 330-350 (kit nr. 1050618200)
1	2	Main spring	1052010075A	1052010073	1052010075A
2	1	Spacer block left	1052025732	1052025739	1052025737
3	2	Air spring assembly (piston, rubber, air coupling)	1052032578A	1052032588	1052032591
4	1	Spacer block right	1052025731	1052025738	1052025736
5	1	Cross beam	1052040112	1052040112	1052040112
6	1	Upper spring plate left	1052040114B	1052040114B	1052040114B
7	1	Upper spring plate right	1052040115A	1052040115A	1052040115A
8	1	Panhard rod	1052060099	1052060099	1052060099
9	1	Panhard rod bracket on main spring	1052060102	1052060273	1052060273A
10	1	Panhard rod ball-joint	1052061416	1052061416	1052061416
11	1	Link arm	1052061417	1052061417	1052061417A
12	1	Link arm bracket	1052061419	1052061419	1052061419
13	1	Panhard rod bracket	1052061420A	1052061420A	1052061420B
14	2	Stabiliser clamp	1052070064	-	-
15	2	Stabiliser rubber	1052070065	-	-
16	2	Stabiliser bracket	1052070108	-	-
17	1	Bracket Stabiliser / Compressor box	1052075100	1052131220	1052131220
18	2	Stabiliser arm	1052070111	-	-
19	1	Stabiliser bar	1052070112	-	-
20	2	Mounting plate	1052070210	-	-
21	1	Ball-joint bracket left	1052090202	1052090277	1052090277
22	1	Ball-joint bracket right	1052090203	1052090276	1052090276
23	2	Height sensor	1052090212	1052090212	1052090212
24	2	Height sensor rod	1052095208	1052095083	1052095216A
25	2	Shock absorber	1052104090C	1052104106	1052104105
26	2	Bump stop	1052151270A	1052151270A	1052151270A
27	1	Exhaust mounting plate	1052350011	1052350011	1052350011
28	1	Air tank mounting bracket	1052350143A	1052350143A	1052350143A
29	1	Air tank mounting bracket	1052350144A	1052350144A	1052350144A
30	1	Adapter plate	1052350145	1052350145	-
31	1	Air tank kit	1052255122	1052255122	1052255122
32	2	Distance bush	0014200063	-	-
33	1	A/C lines clamp	0014100010	-	-
34	8	Distance bush U-bolt nut	0014300049	-	-
35	1	Pipe clamp	0014100009	-	-
36	1	Spacer block (set of 2)	1052025303	-	-
37	1	Fuse bracket	0030500154	0030500154	0030500154
38	1	Fuse bracket support	0030500155	0030500155	0030500155
	1	Wiring harness	1052201236	1052201236	1052201236
	1	Supply cable	1052201192	1052201192	1052201192
	1	Compressor box *	1052131194	1052131194	1052131194

* For an exploded view of the compressor box, see chapter 'General - Universal compressor box 2'

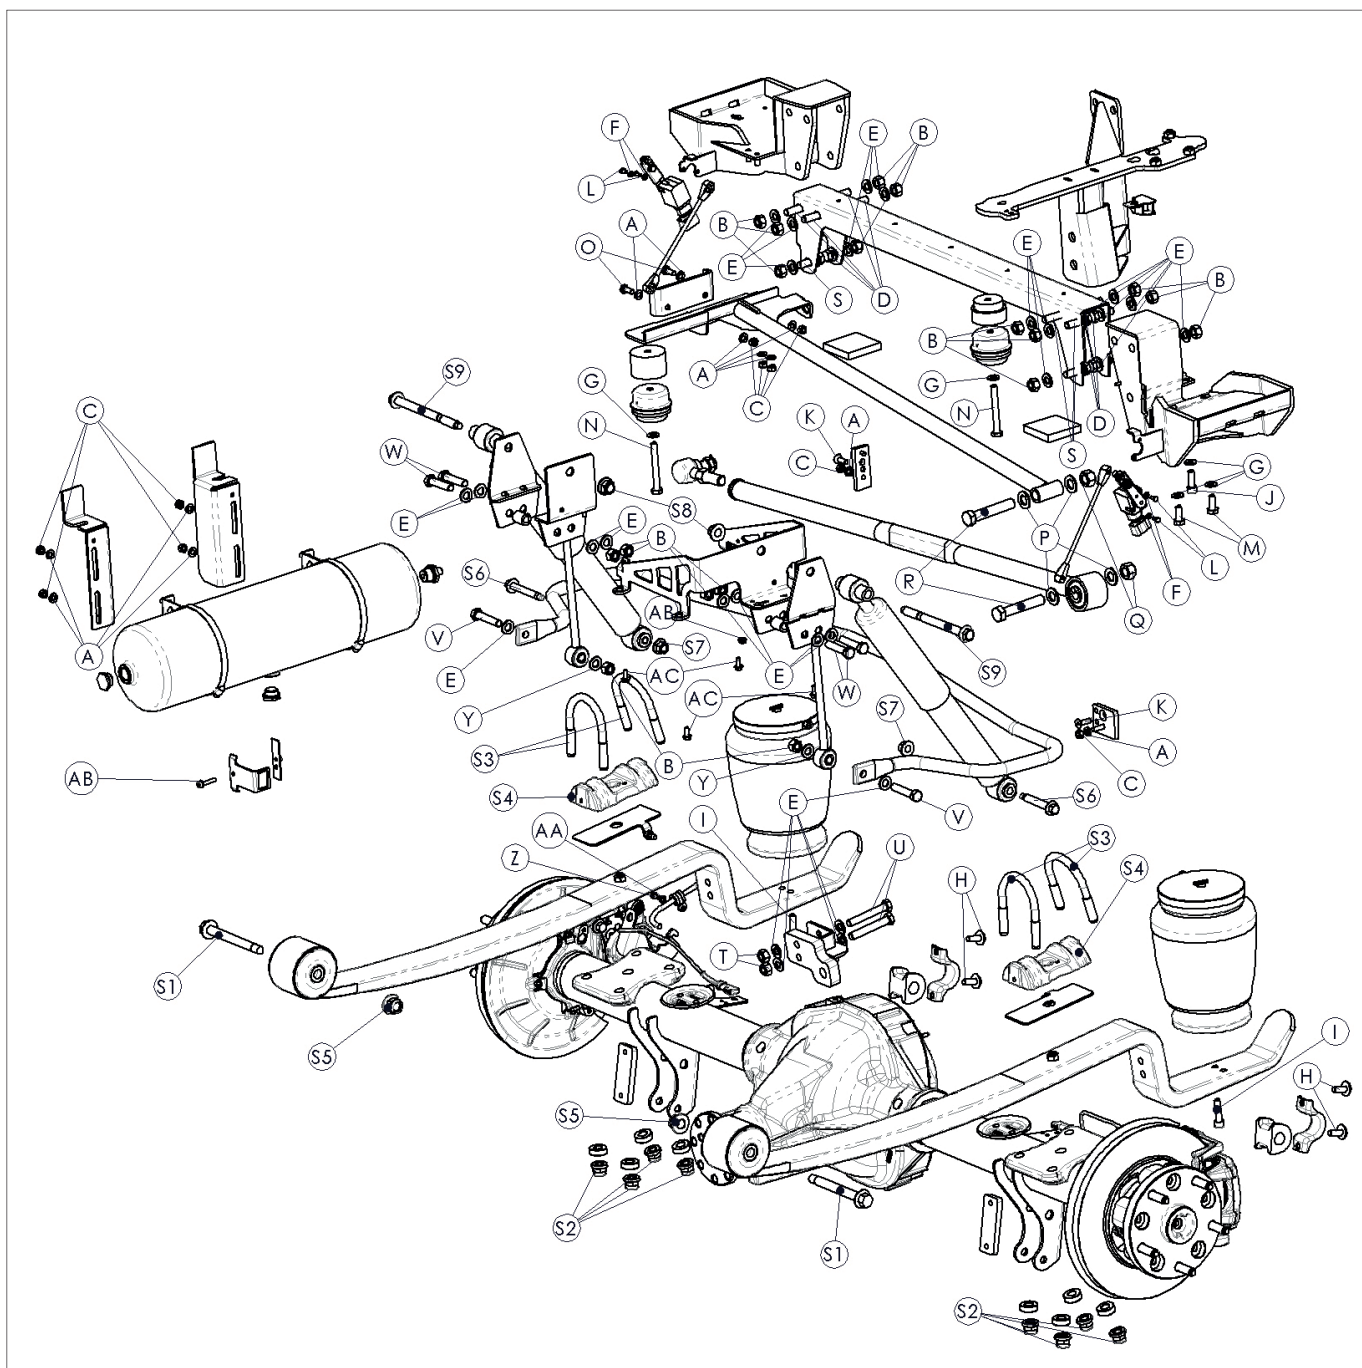

Original parts from the vehicle

Item	Qty.	Description
S1	2	Leaf spring bolt
S2	8	leaf-spring U-bolt nut
S3	4	U-bolt
S4	8	Spring clamp
S5	2	Leaf spring nut

Item	Qty.	Description
S6	2	Shock absorber bolt M12
S7	2	Shock absorber nut M12
S8	2	Shock absorber nut M14
S9	2	Shock absorber bolt M14

FORD


Transit V363 RWD/FWD - 2014-current - AdBlue (Euro 6)



Item	Description	RWD (kit nr. 1050619201)		FWD 290-310 (kit nr. 1050618202)		FWD 330-350 (kit nr. 1050618200)	
		Qty.	Part number	Qty.	Part number	Qty.	Part number
A	Washer M8	12	0011208000AA	12	0011208000AA	12	0011208000AA
B	Lock nut M12	18	0011012001CA	12	0011012001CA	12	0011012001CA
C	Lock nut M8	12	0011008001CA	10	0011008001CA	10	0011008001CA
D	Bolt M12x35	8	0010112035CA	8	0010112035CA	8	0010112035CA
E	Washer M12	36	0011212000AA	28	0011212000AA	28	0011212000AA
F	Washer M5	4	0011205000AA	4	0011205000AA	4	0011205000AA
G	Washer M10	5	0011210000AA	5	0011210000AA	5	0011210000AA
H	Flange bolt M10x30	4	0010710030AAK	-	N.A.	-	N.A.
I	Allen Screw M10x50 Tuflok	2	0010310050AE	2	0010310050AE	2	0010310050AE
J	Allen screw M10x30	1	0010310030CA	1	0010310030CA	1	0010310030CA
K	Countersunk Allen screw M8x25	2	0010508025AA	2	0010508025AA	1	0010508025AA
L	Bolt M5x10	4	0010105010AA	4	0010105010AA	4	0010105010AA
M	Bolt M10x30	2	0010110030CA	2	0010110030CA	2	0010110030CA
N	Bolt M10x85 Tuflok	2	0010110085CE	-	N.A.	-	N.A.
	Bolt M10x70	-	N.A.	2	0010110070CA	-	N.A.
	Bolt M10x100	-	N.A.	-	N.A.	2	0010110100CA
O	Bolt M8x25	2	0010108025CA	2	0010108025CA	2	0010108025CA
P	Washer M16	4	0011216000AA	4	0011216000AA	4	0011216000AA
Q	Lock nut M16	2	0011016001CA	2	0011016001CA	2	0011016001CA
R	Bolt M16x90	2	0010116090CA	2	0010116090CA	2	0010116090CA
S	Bolt M12x40	4	0010112040CA	4	0010112040CA	4	0010112040CA
T	Lock nut M12x1,5	2	0011012002CA	2	0011012002CA	2	0011012002CA
U	Bolt M12x80x1,5	2	0010112080DA	2	0010112080DA	2	0010112080DA
V	Bolt M12x60	2	0010112060CA	-	N.A.	-	N.A.
W	Bolt M12x55	4	0010112055CA	-	N.A.	-	N.A.
Y	Washer M12 ø37x3	2	0011312037A	-	N.A.	-	N.A.
Z	Bolt M6x12	1	0010106012AA	-	N.A.	-	N.A.
AA	Washer M6	1	0011206000AA	-	N.A.	-	N.A.
AB	Round head screw M6x30	1	0012606030CA	1	0012606030CA	1	0012606030CA
AC	Flange bolt M6x16	4	0010706016AAA	-	N.A.	-	N.A.
-	Flange lock nut M6	-	N.A.	4	0011106001AB	4	0011106001AB
-	Taptite M8x25	-	N.A.	1	0012108025AA	1	0012108025AA

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Lined paper template with horizontal ruling lines.

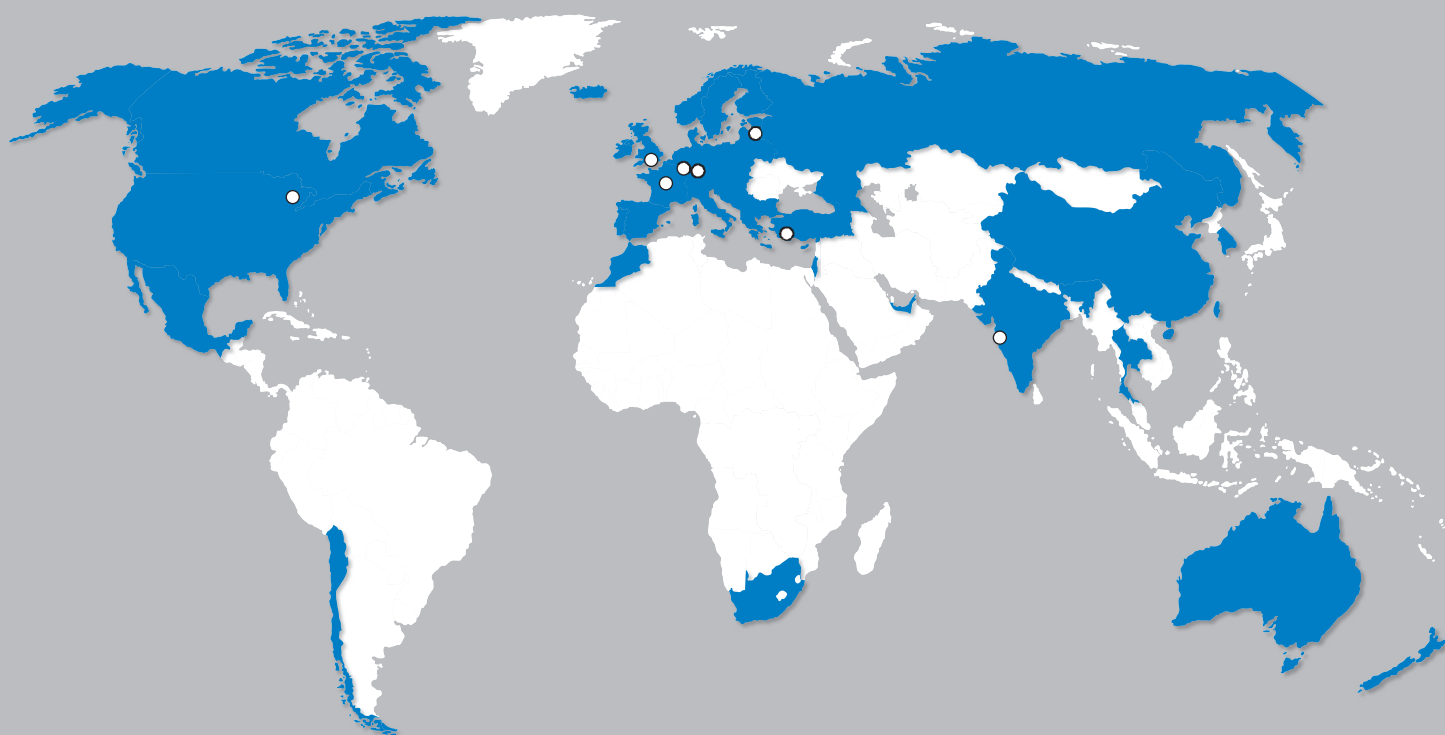

VB-AIRSUSPENSION,

INCREASED COMFORT, BETTER DRIVEABILITY, MORE SAFETY.