

PARTS LIST

Renault




Master X62 FWD

735105192218

V 07

For kit numbers:				For kit numbers:			
1050722200	Van	rear	2C	1051922100		front	2C
1050722210	Chassis cab			1051922200	Van	rear	
1051222200	Van			1051922202			
1051222210	Chassis cab			1051922210	Chassis cab		
				1051922212			4C
				1051922400	Van		
				1051922410	Chassis cab		

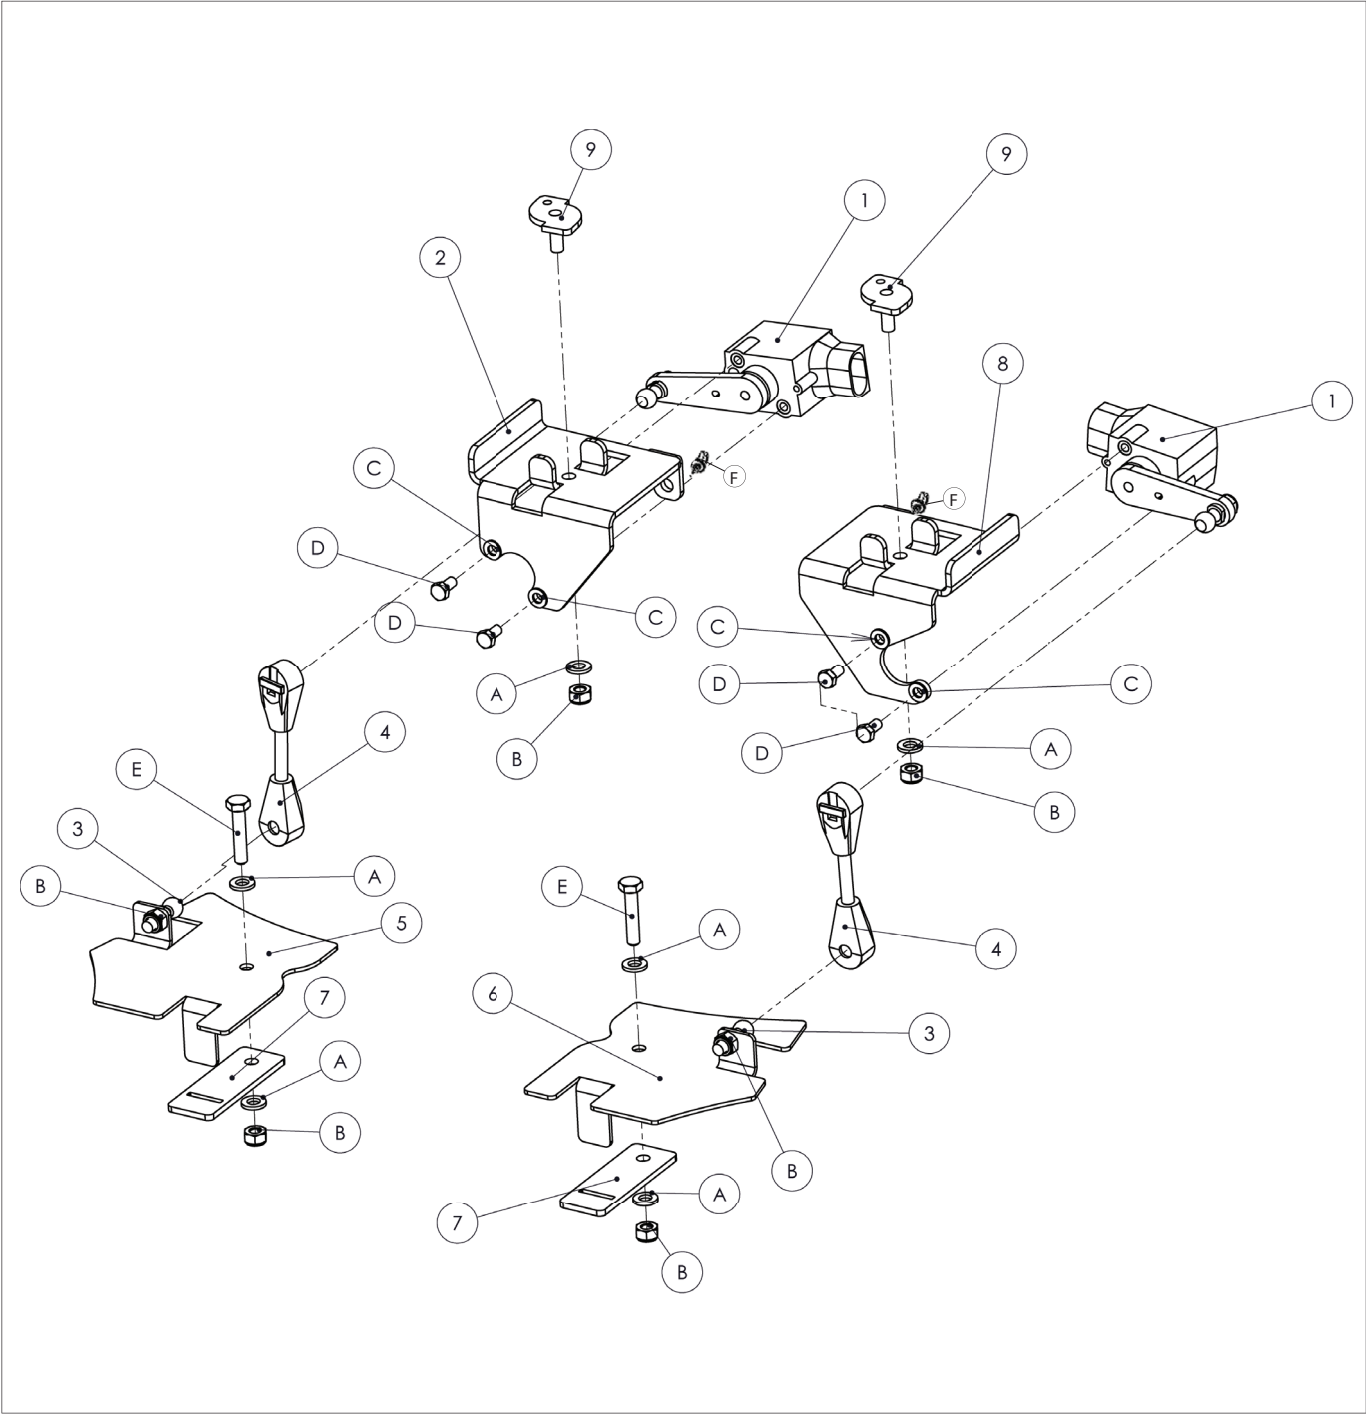



RENAULT

Master X62 FWD



Item	Qty.	Description	Part number
1	2	Height sensor	1052091030
2	1	Height sensor bracket left	0062090141
3	2	Ball joint M6	1052095178
4	2	Height sensor rod HtH=180mm	1052095004
5	1	Ball joint bracket left	1052090143
6	1	Ball joint bracket right	1052090144
7	2	Ball joint bracket clamp	1052090145
8	1	Height sensor bracket right	0062090142
9	2	Height sensor bracket clamp	0062090143
-	1	Wiring harness	1052201117

A	6	Washer M6	0011206000AA
B	4	Lock nut M6 nylon	0011006000AA
C	4	Washer M5	0011205000AA
D	4	Bolt M5x10	0010105010AA
E	2	Bolt M6x40	0010106040AA
F	2	Tie-wrap 4.6x200 fir tree Ø6.5mm H=7.5mm	0030225105

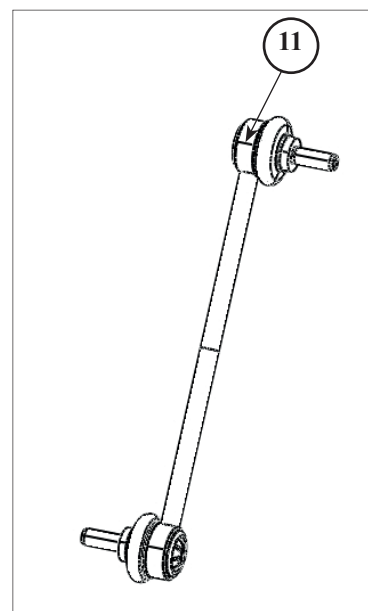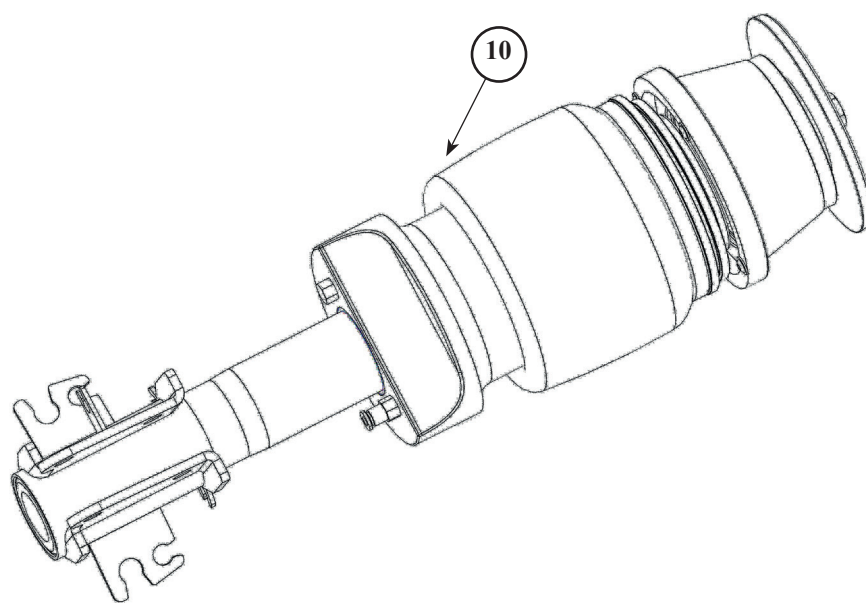


RENAULT

Master X62 FWD



Item	Qty.	Description	Part number
10	1	Air spring + Shock absorber left	Not available anymore
	1	Air spring + Shock absorber right	Not available anymore
11	2	Stabiliser arm (including two flange lock nuts)	1052070093

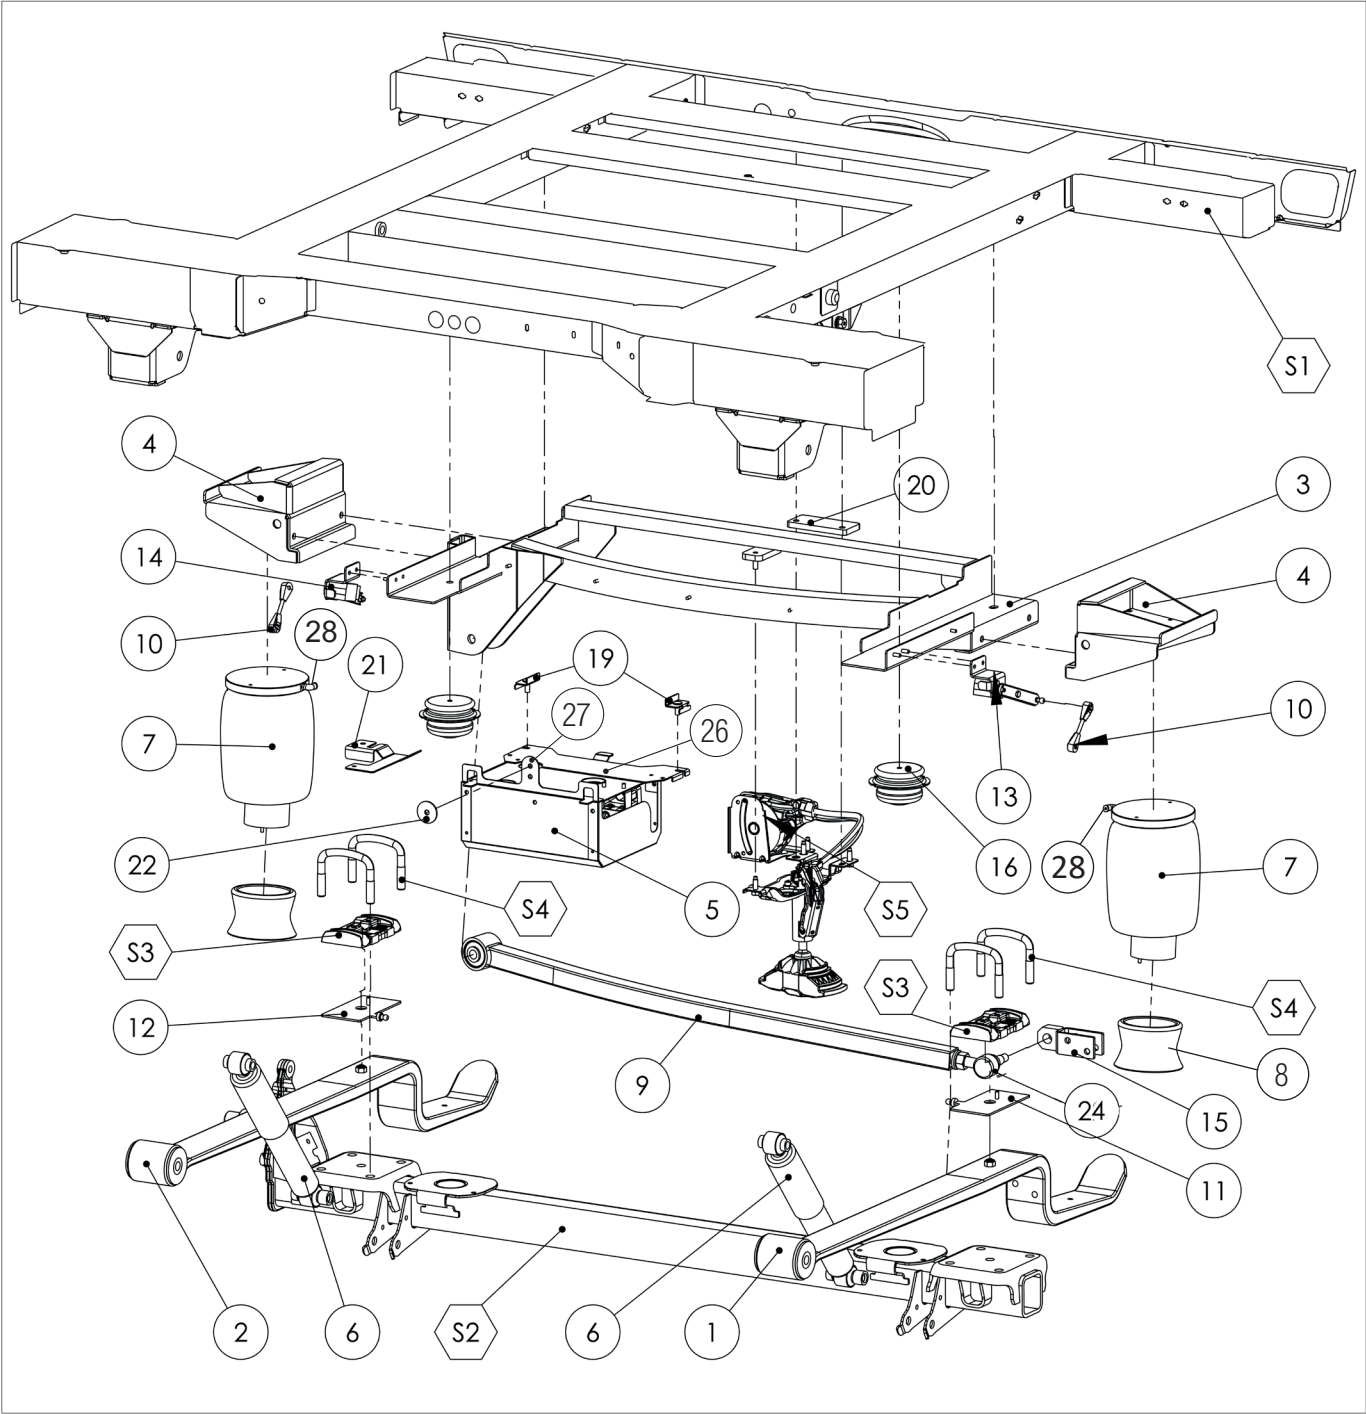

Original parts from the vehicle

Item	Qty.	Description
S1	1	Chassis
S2	1	Rear axle
S3	2	Spring plate

Item	Qty.	Description
S4	4	U-bolt
S5	1	Spare-wheel winch


RENAULT

Master X62 FWD



Item	Qty.	Description	Part number Van version	Part number Chassis cab version
1	1	Main spring left	1052010060	↔
2	1	Main spring right	1052010061	↔
3	1	Upper cross beam	1052040076	↔
4	2	Upper spring plate	1052040077	1052040091
5	1	Compressor box *	1052130116	1052130123
6	2	Shock absorber	1052100057A	↔
7	2	Air spring	1052032530	↔
8	2	Piston	1052030174	↔
9	1	Panhard rod	1052060065	↔
10	2	Height sensor rod	1052095063A	↔
11	1	Ball-joint bracket left	1052090127	↔
12	1	Ball-joint bracket right	1052090128	↔
13	1	Height sensor left	1052090125	↔
14	1	Height sensor right	1052090126	↔
15	1	Panhard rod bracket	1052060066	↔
16	2	Bump stop	1052151270	↔
19	2	Mounting bracket compressor box	1052131104	↔
20	1	Spacer	1052350047	↔
21	1	Wiring bracket	1052350049	↔
22	1	Centring part	1052131102	↔
23	2	Spacer	1052025716	↔
24	1	Panhard rod ball-joint (including fasteners)	1052061416	↔
25	1	Winch support spare wheel	N/A	1052350058
26	1	Compressor box bracket	1052131099	1052131111
27	1	Compressor box bracket	1052131100	
28	2	Air coupler	0020000015	↔
-	1	Wiring harness	1052201148	↔
-	1	Supply cable	1052201149	↔

* For an exploded view of the compressor box, see chapter "General - Universal compressor box 7"

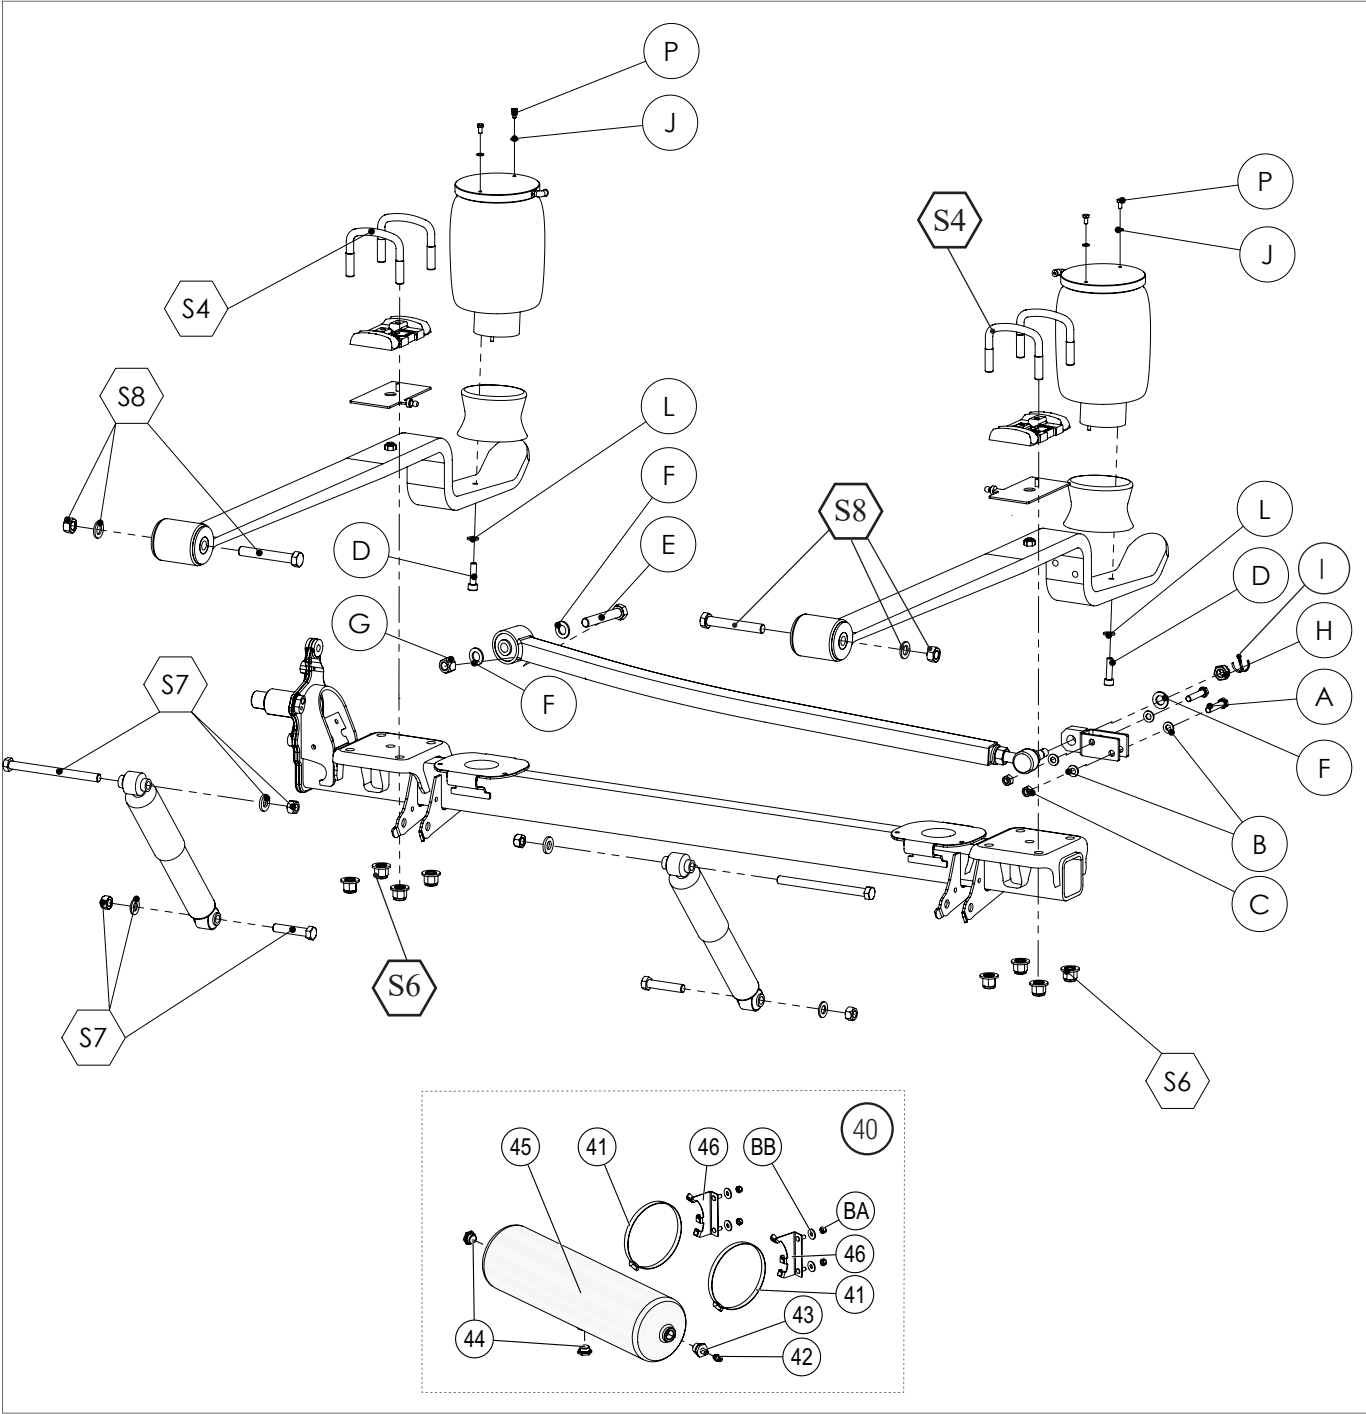

Original parts from the vehicle

Item	Qty.	Description
S4		U-bolt
S6		Nut U-bolt

Item	Qty.	Description
S7		Fasteners shock absorber
S8		Fasteners main spring


RENAULT

Master X62 FWD



Item	Qty.	Description	Part number
A	2	Bolt M10x55x1.25	0010110055CA
B	2	Washer M10	0011210000A
C	2	Lock nut M10 nylon	0011010000CA
D	2	Allen screw M8x25	0010308025AA
E	1	Bolt M16x90	0010116090CA
F	2	Washer M16	0011216000AA
G	1	Lock nut M16	0011016001AA
H	1	Castellated nut (is included in item 24 Panhard rod ball-joint)	-
I	1	Split pin (is included in item 24 Panhard rod ball-joint)	-
J	4	Washer M6	0011206000AA
L	2	Washer M8	0011208000AA
P	4	Allen screw M6x12	0010306012AA
xx		These items are intended for single use and must not be reused	

Item	Qty.	Description	Part number (Only for kit nr. 1051922202, 1051922212)
40	1	Air tank assembly (items 41 .. 46)	1052255117
41	2	Hose clamp ø140-160	0014416040
42	1	Air coupler ø6 x G1/8" straight	0020000019
43	1	Air coupler M22x1/8"	0020500006
44	2	Plug M22	2156560016
45	1	Air tank 10 L	3000301053
46	2	Air tank bracket	3000301054
BA	4	Lock nut M8	0011008001AA
BB	4	Washer Ø24	0011308000A
xx		These items are intended for single use and must not be reused	

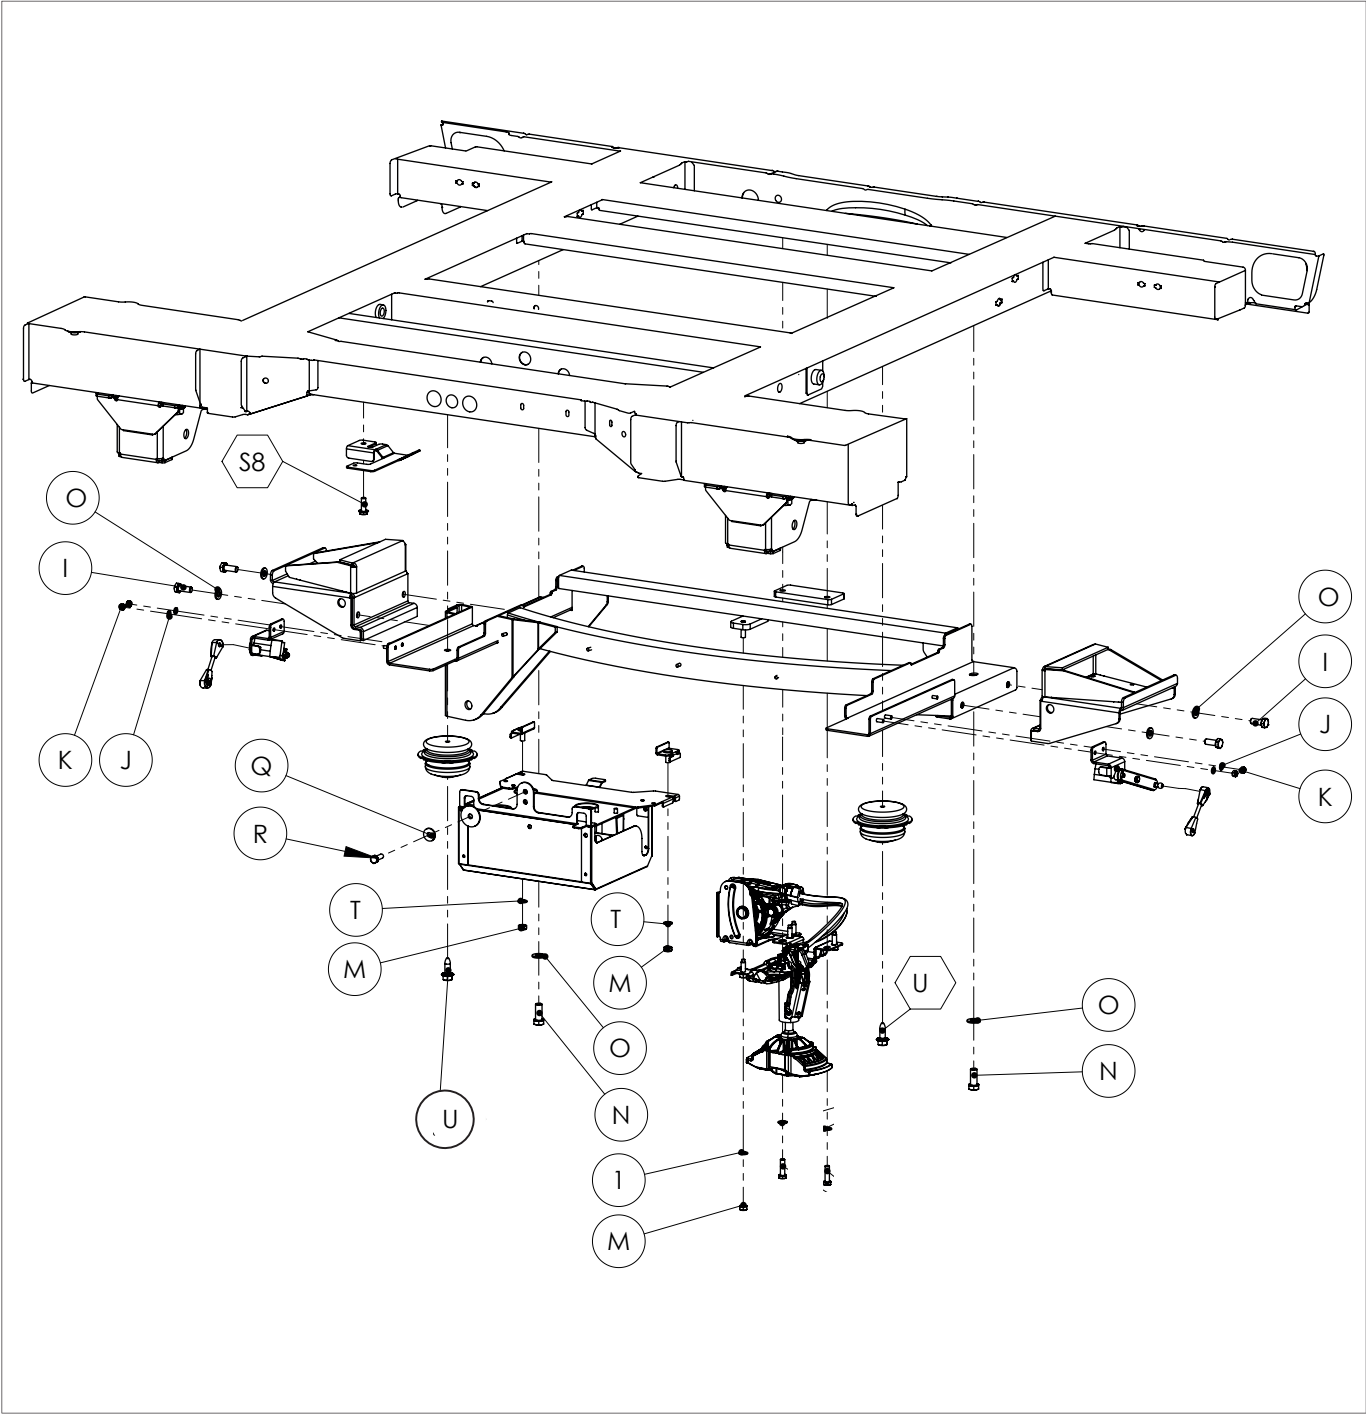

Original parts from the vehicle


Item	Qty.	Description
S8	1	Fastener handbrake cable support

RENAULT

Master X62 FWD



Item	Qty.	Description	Part number
I	4	Allen screw M12x30	0010312030CA
J	4	Washer M6	0011206000AA
K	4	Lock nut M6	0011006001AA
M	3	Lock nut M8	0011008001AA
N	2	Bolt M12x30	0010112030CA
O	6	Washer M12	0011212000AA
Q	1	Washer M8 ø30x1.5	0011308030A
R	1	Bolt M8x20	0010108020AA
T	2	Washer M8x3	0011208002A
U	2	Bolt M10x55	0010110055CA
xx		These items are intended for single use and must not be reused	

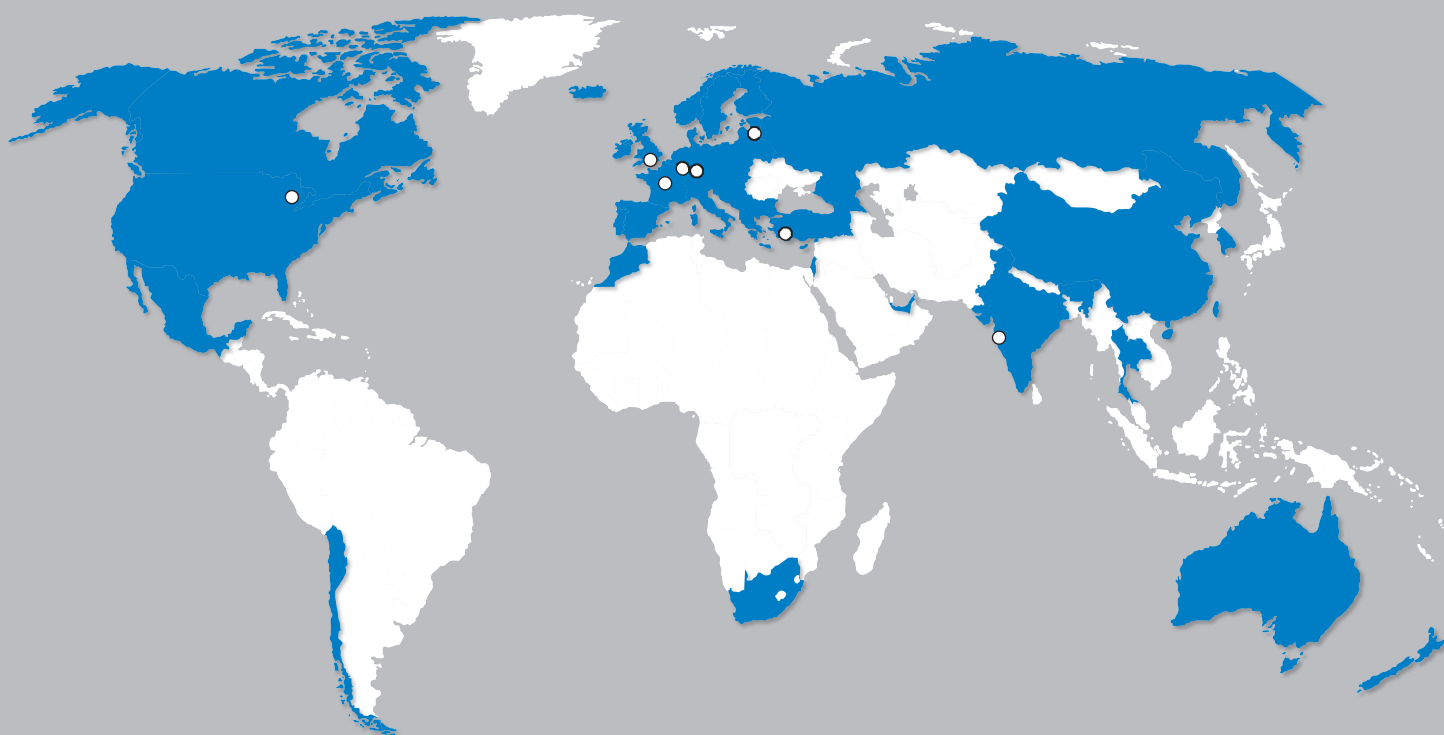

VB-AIRSUSPENSION,

INCREASED COMFORT, BETTER DRIVEABILITY, MORE SAFETY.